

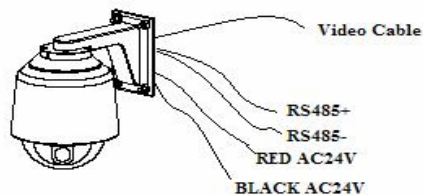
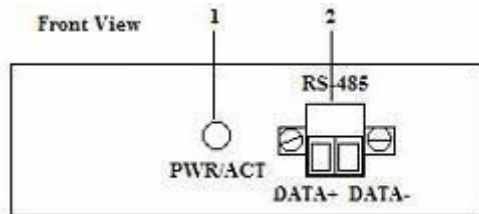



## RS232 to RS485 Converter

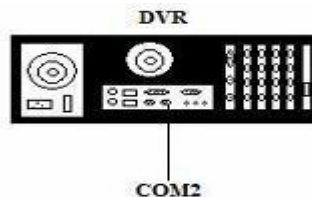

1. LED:  
Indicate Power ON/OFF
2. RS485 Data+ and RS485-  
Control PTZ Camera or Speed Dome.

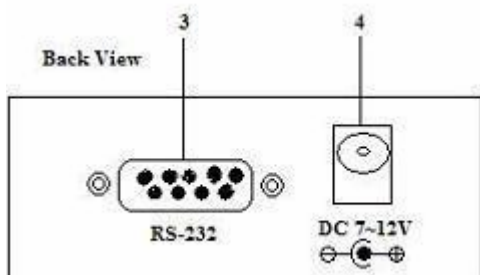

 3. RS232 Serial Cable:  
Connect the RS232 cable to COM2
4. DC IN:  
DC Power Adapter (7V-12V)
5. RS232 Cable



### How to Setup RS232/485 Converter with PTZ Camera

1. Connect the DC Adapter (7V-12V) to the RS-232/485 Converter.
2. Connect the RS232 cable to COM2 in the back
3. Connect the RS485+ and - to the Speed Dome.
4. Select the Protocols setting from the DVR to match with the Camera or Speed Dome.
5. Select the BAUD RATE from the DVR to match with the Camera or Speed Dome.
6. Select the Camera or Speed Dome ID setting to match with the Channel ID.

For more information please see  
The DVR Manual and Operation Manual for High Speed Dome Camera

Please read the operation manual carefully before installing and using the unit.